GB AWV 414

PROGRAMME TABLE

IGNIS is a registered trademark

Cotton
Synthetic
Delicate/Wool
On/Off
Rinse hold

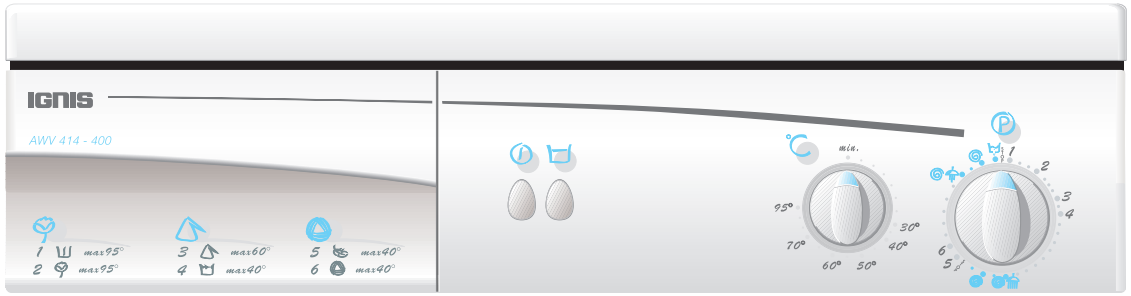

Programme		Type of textiles/Degree of soilling	Max Load kg	Detergent and Additives			Special functions that can be selected	Temperature Selector °C	Programme selector knob
				Pre-wash	Wash	Fabric Softner	Rinse Hold		
1	**Cotton with pre-wash**	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3,5 kg.	5,0	❇	Yes	❇	❇	Min to 95	**1**
2	**Cotton**	Averagely soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc). The max load for heavily soiled laundry is 3,5 kg.	5,0	–	Yes	❇	❇	Min to 95	**2**
3	**Synthetic**	Averagely soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2,0	–	Yes	❇	❇	Min to 60	**3**
4	**Cotton short Synthetic short**	Lightly soiled textils in cotton, linen, polyester (Diolen, Trevira); polyamide (Perlon, Nylon), other synthetics or similar blends.	2,5 2,0	–	Yes	❇	❇	Min to 40	**4**
5	**Delicate**	Curtains and delicate synthetic textiles (dresses, skirts and blouses etc).	1,5	–	Yes	❇	❇	Min to 40	**5**
6	**Wool**	Only machine washable woollens with pure new wool label.	1,0	–	Yes	❇	No	Min to 40	**6**
	Rinse and long spin	With this programme you can add fabric softner or starch. The programme ends with a long spin cycle.	5,0	–	–	❇	❇	Min	
	Long spin	This programme provides a long spin cycle, the same as the spin cycle in the Cotton programme.	5,0	–	–	–	–	—	
	Rinse and short Spin	With this programme you can add fabric softner or starch. The programme ends with a short spin cycle.	1,5	–	–	❇	❇	Min	
	Short Spin	This programme provides a short spin cycle, the same as the spin cycle in the Wool programme.	1,5	–	–	–	–	—	
	Draining	Drain only, without spin. e.g to unload the laundry earlier.	–	–	–	–	–	—	

CONSUMPTION DATA

Programme		Water	Energy	Programme duration
		(l)	(kWh)	(min.)
Cotton 95 °C with pre-wash	1	80	2,00	120
Cotton 95 °C	2	70	1,80	110
Cotton 60 °C	2	70	1,20	110
Synthetic 60 °C	3	60	0,90	85
Cotton short 40 °C Synthetic 40 °C	4	65 60	0,70 0,60	75 75
Delicate 40 °C	5	80	0,60	70
Wool 40 °C	6	80	0,60	65

SELECTING THE PROGRAMME

1. Turn the programme selector knob clockwise to the desired programme.
2. Set the temperature knob to the desired temperature.

PRESS THE DESIRED SPECIAL OPTION BUTTON

Rinse hold/Spin delay button

- The laundry remains in the last rinse water without being spun, to avoid heavy creasing.
- Especially suitable for the “Synthetic” or “Delicate” programmes, if the laundry is not to be unloaded immediately after the end of the programme.

Stopping Rinse hold

Press the Rinse hold button again; the load will be spun according to the selected programme.

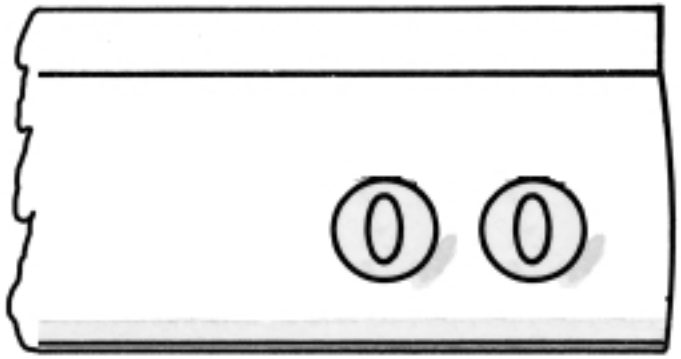

PROGRAMME START

1. Plug in the appliance.
2. Turn on the water supply tap.
3. Press the “ON/OFF” button.

DOOR LOCK

The door locks automatically after the programme start until the end of the programme.

PROGRAMME END

- The programme sequence indicator is at “Stop”.

1. Press the “ON/OFF” button.
2. Cancel the special options by pressing the appropriate buttons.
3. Turn the water supply tap(s) off.
4. Wait for the door to unlock (about 2 minutes).
5. Open the door and unload the machine.

Note: Do not fully close the door but leave it ajar to allow the drum to dry out.

PROGRAMME RESELECTION

1. Press the “ON/OFF” button.
2. Select the new programme, temperature and relative options.
3. Press the “ON/OFF” button.